


1. Remove two M2.6\*5 screws from the bottom of L bracket.
2. Place the monitor into the PMB-1029 Panel Mount Bracket.
3. Secure the monitor to the PMB-1029 Panel Mount Bracket by fastening two M2.6\*5 screws into the left side, two M2.6\*5 into the right side, and re-install the two bottom M2.6\*5 screws that you removed from step one.
4. Create a cutout on the wall or panel where you want to mount the monitor and install the monitor into the cutout.
5. Install the eight mounting hardware into the PMB-1029 Panel Mount Bracket as shown in the diagram.
6. Fasten the eight M4\*20 screws to secure the PMB-1029 Panel Mount Bracket onto the wall or panel.

M2.6\*5

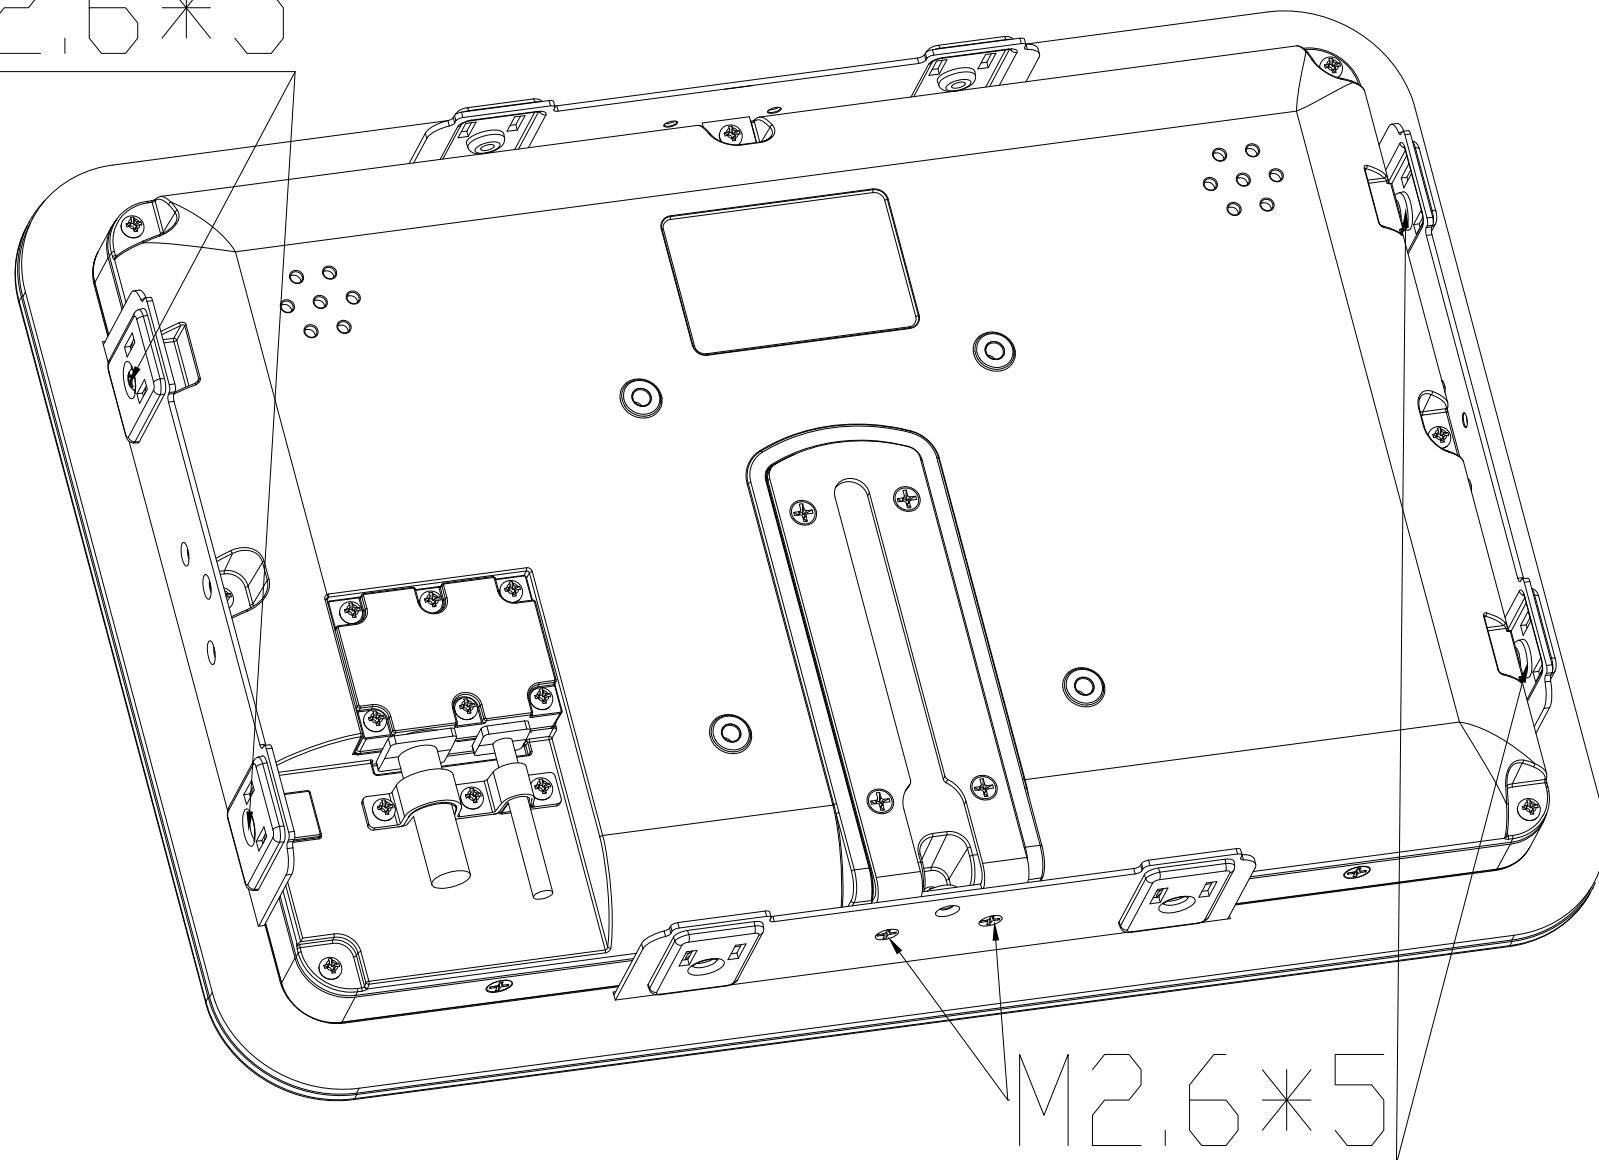

M4\*20

